


# Restaurant

Lipman USA Quick Reference Card  
for Nurit 2080, 2090, and 2085 Terminals


## Sale (Swiped)

Swipe Card

Amount of Sale: 

Server ID:  
(Optional) 

## Sale (Manual)

Enter Account #: 

Exp Date (MMYY) 


Enter Server #: 

Amount of Sale: 

Enter Server ID: 


Enter Zip Code: 

## Debit


Press: 

Swipe Card:

Enter Amount: 

Enter Tip Amount: 

Cash Back:  
(Optional) 


Enter Server ID:  
(Optional) 

Enter PIN #\*: 

\*If using an External PinPad  
Enter PIN # on External PinPad  
Press Enter on PinPad

## Force

Press: 

Swipe Card or  
Enter Account #: 

Exp. if manual: 


Enter Amount: 

Enter Auth #: 

Enter Server ID: 

## Force

Press: 

Swipe Card or  
Enter Account #: 

Exp. if manual: 


Enter Amount: 


Enter Auth #: 

Enter Server ID: 

## Void Return

Press: 


Swipe Card or  
Enter Account #: 

Exp. if manual: 

 
Enter Amount: 

## Void Sale


Press: (2x) 


Swipe Card or  
Enter Account #: 

Exp. if manual: 

Enter Amount: 

## Void Force

Press: (3x) 

Swipe Card or  
Enter Account #: 

Exp. if manual: 

Enter Amount: 

## Reprint Receipt

Press: 

Enter Password:  
(Optional)


Receipt Copy:

1. Last Cust Rcpt.
2. Any Receipt
3. last Mrch. Rcpt.

If "Any Receipt" is Selected:

Choose EDC Type:

1. Credit
2. Debit
3. Check
4. Cash

Enter Transaction #  
then press: 

## Batch Close

**\*\*Used for Non-Host Based  
Terminals ONLY\*\***

**\*\*Adjust ALL Tips before  
Batch Close\*\***

Press: 

Press: 



# Restaurant

Lipman USA Quick Reference Card  
for Nurit 2080, 2090 and 2085 Terminals

## Print Reports

Default Report

**Report**

Print Other Reports

**Menu**

Press:

**Enter**

Press:

Press:

**2**

Select Report Type:

- 1. Condensed
- 2. Short
- 3. Journal
- 4. Totals

Choose Server:

Press Enter for ALL servers or press:

**2**

Enter Server ID:

**Enter**

Choose EDC Type:

Press Enter for ALL EDC Types, or Press Forced Key for Other Options:

**Enter**

**Forced**

Then Press:

**Enter**

Enter Card Type:

Press Enter for ALL Card Types, or Press Forced Key for Other Options:

**Enter**

**Forced**

Then Press:

**Enter**

Sort Method:

- 1. By Trans #
- 2. By Card Type
- 3. By Server ID

Choose Transaction Type:

Press Enter for ALL Trans Types, or Press Forced Key for Other Options:

**Enter**

**Forced**

Then Press:

**Enter**

Set Current Defaults:

Yes

**Enter**

No

**Menu**

## Print Tip Report

Press:

**Edit**

Press:

**Enter**

Press:

**7**

Choose EDC Type:

Press Enter for ALL EDC Types, or Press Forced Key for Other Options:

**Enter**

**Forced**

Choose Card Type:

Press Enter for ALL Card Types, or Press Forced Key for Other Options:

**Enter**

**Forced**

Set Current Defaults:

Yes

**Enter**

No

**Menu**

## Totals Review

Press:

**Review**

To view EDC Totals use the "Forced" Key to scroll down, and the "Return" Key to scroll up.

To view Details for a specific EDC Type, use "forced" & "Return" Keys to find desired EDC Type, then press "Enter".

After selecting an EDC, select a Trans by using the "Forced" & "Return" key, then use the "Void" & "Verify" keys to scroll Right & Left through the trans details.

## Tip Edit

Press:

**Edit**

Press:

**Enter**

Select Tip Edit option:

- 3. Scroll Open
- 4. By Server #
- 5. By Transaction #
- 6. By Card Type
- 7. By Card #

If Scroll Open is selected terminal displays first untipped transaction.

Press:

**Enter**

Enter Tip Amount:

**Enter**

Displays new amount, then next untipped transaction.

If by Server, Transaction or Card #:

Enter #:

**Enter**

Displays Untipped Transactions

Press:

**Enter**

Enter Tip Amount:

**Enter**

Display New Amount

Press:

**Menu**

If by Card Type:

To select Card

Type press:

**Forced**

Press:

**Enter**

Display untipped transactions:

Press:

**Enter**

Enter Tip Amount:

**Enter**

Display New Amount

Press:

**Menu**

