


 
 
 


 
 















Restaurant

SoftPay Verix Quick Reference Card
for 3300,3730/LE, 3740 and 3750 Terminals



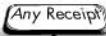





 







Sale (Credit/Debit)

Swipe Card or Press and 
Enter Amount: 
Chose Card Type: 
Exp Datre (MM/YY): 
Card Present?  
Enter V-Code From Card: 
Code Present?  
Enter Customer Number: (required) 
Enter Server ID: 
Enter Amounts: (Base, Tip, Cash Back, Etc) 
Enter Zip Code: 
Enter PIN: 
Print Customer Copy?  









Reprint

Press the Reprint Key: 
Select:  
Scroll Hosts, Press:  
Select Hosts, Press: 
Phone Number: 
Printing...

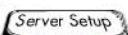Sale (Purchase Card)


 
 


 
 
 
 


Swipe Card or Press and 
Enter Amount: 
Chose Card Type: 
Exp Datre (MM/YY): 
Card Present?  
Enter V-Code From Card: 
Code Present?  
Enter Customer Number: (required) 
Enter Server ID: 
Enter Amounts: (Base, Tip, Cash Back, Etc) 
Enter Zip Code: 
Enter PIN: 
Print Customer Copy?  

Server Functions

Scroll Menu (↓) Until Desired Option Appears
Press: 
Password: 
  
  




NOTE: Servers are either Added and Deleted, or Logged On and Lgged Off depending on how the terminal is configured

Tip Adjust

Press the TIP Key: 
Scroll Hosts, Press:  
Select Host, Press: 
Password: 
Retrieve By:    
(Transaction Displays)
Select:  
↓
Enter New TIP Amount. Adjusted Transaction Displays. Continue Above with Adjust or Next.

Press CLEAR once to return to "Retrieve By" menu or TWICE to return to Idle.

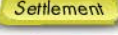Settlement

Press: 
Password: 
(Terminal Displays Totals)
Enter or Confirm Amounts: 
(Communications Response)
(Settlement Report Prints)



Force (Credit)

Scroll Menu (↓) Until Desired Option Appears

Press:

Password:

Swipe Card or Enter Account #:

Choose Card Type (Credit or Debit):

Exp Date (MM/YY):

Enter Clerk ID:

Enter Amount:

Enter Auth Code:

Print Customer Copy?

Refund (Credit/Debit)

Press:

Password:

Swipe Card or Enter Amount:

Choose Card Type (Credit or Debit):

Exp Date (MM/YY):

Enter Clerk ID:

Enter Amount:

Print Customer Copy?

Force (Purchase Card)

Scroll Menu (↓) Until Desired Option Appears

Press:

Password:

Swipe Card or Enter Account #:

Choose Card Type (Credit or Debit):

Exp Date (MM/YY):

Choose Trans Type:

Enter Customer Number (Required):

Enter Clerk ID:

Enter Amount (Amount + Tax):

Enter Auth Code:

Print Customer Copy?

Force Review

Scroll Menu (↓) Until Desired Option Appears

Press:

Scroll Host, Press:

Select Host, Press:

Password:

Retrieve By:

(Transaction Displays)

Make Selection Terminal Prompts:

Note: You may adjust amount or Clerk ID.
Press CLEAR Twice to return to Idle.

Refund (Purchase Card)

Scroll Menu (↓) Until Desired Option Appears

Press:

Password:

Swipe Card or Enter Account #:

Choose Card Type (Credit or Debit):

Exp Date (MM/YY):

Enter Customer Number (Required):

Enter Clerk ID:

Enter Amount (Amount + Tax):

Enter Tax Amount (Required):

Print Customer Copy?

Void

Scroll Menu (↓) Until Desired Option Appears

Press:

Scroll Hosts, Press:

Select Host, Press:

Void Last Trans?

Retrieve By?

Invoice #

Account #

(Transaction Displays)

Options Are:

To Confirm Press YES

Print Customer Copy?

